

# TurboBlower

Part No	Description
1	Flange Cover
2	Inlet Flange
3	Inlet Screen
4	Front Cover
5	Impeller Washer
6	Impeller
7	Sealing Sleeve
8	Sleeve
9	Housing
10	Outlet Flange
11	Rubber Seal
12	Motor Joint Cover
13	Front Bearing
14	Inner Bearing Cover
15	Key
16	Rotor
17	Stator
18	Motor Housing
19	Back Bearing
20	Spring Washer
21	Motor Endbell
22	Motor Cooling Fan
23	Cooling Fan Cover
24	Terminal Box
25	Terminal Box
26	Terminal Box Seal
27	Terminal Box Cover
28	Power Cabtel Connector

